


Adjustable Base
Deluxe Wireless

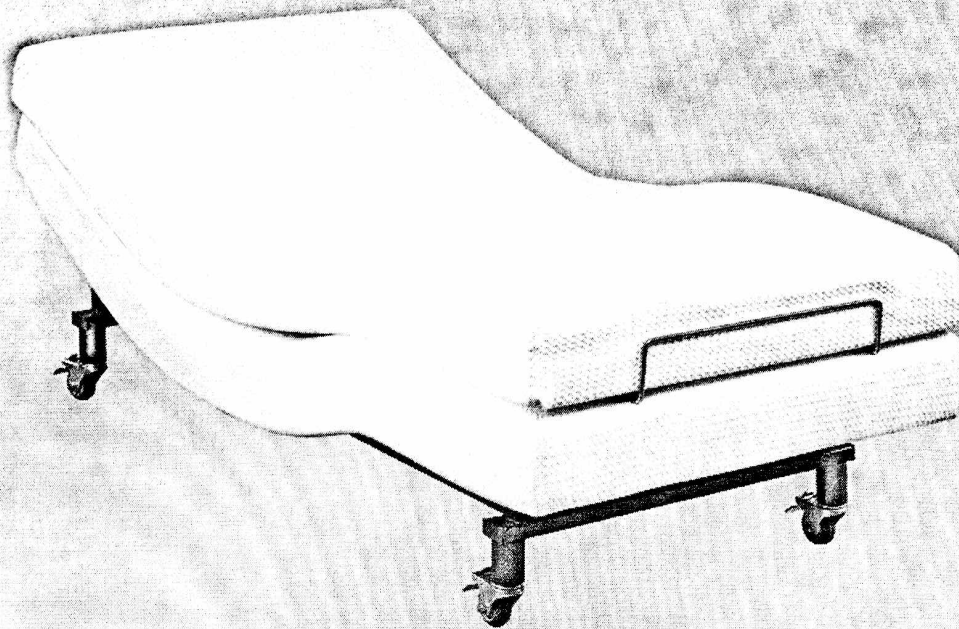

Owners Manual

INNOVA
SLEEP SYSTEMS

CONTENTS

Advisory

Setup and Installation

Innova Wireless Hand Control

1-2-20 year Warranty

ADVISORY

WARNING! READ THE FOLLOWING INFORMATION FAILURE TO USE A SURGE PROTECTION DEVICE COULD COMPROMISE SAFETY OR CAUSE PRODUCT MALFUNCTION.

- Power outages and Electrical surges are by far the biggest cause of problems with electrical circuits. Use a grounded battery backup electrical surge protector (not included).
- The solid-state components are very vulnerable to voltage surges large or small.
- **MAKE SURE THE ELECTRIC OUTLET IS GROUNDED!**

SMALL CHILDREN AND PETS:

Avoid Injury: Children and pets should not be allowed to play on, under or around the adjustable bed without adult supervision.

HOSPITAL OR CONVALESCENT USE DISCLAIMER:

Adjustable beds are designed and engineered for a life style of comfort and are not intended for hospital use or for a bed-ridden patient on an extended recovery. Adjustable beds are not equipped with bars to help patients get safely in and out of bed and are not intended to be used around oxygen therapy or explosive gases.

WEIGHT RATINGS:

The recommended weight restrictions for the Sleep Science adjustable bed is 600 lbs. (270 kg.) The bed is able to support this amount if the weight is evenly distributed across from the head to the foot section. This bed is not designed to support or lift this amount of weight in the head or foot sections alone. Note: exceeding the recommended weight restrictions could damage the adjustable bed and void the warranty. Enter and exit the bed while it is lowered in the flat position. Do not sit on the head or foot sections while they are in the raised position.

MOTOR RATINGS:

The Lift motors are not rated for continuous use. For full life expectancy of the lift motors, do not operate more than 1 minutes of continuous use over a 10 minute period.

SMALL CHILDREN AND PETS:

Avoid Injury: Children and pets should not be allowed to play on, under or around the adjustable bed without adult supervision.


MASSAGE UNITS:

The massage feature creates a vibrating hum during operation and the resonance will increase accordingly with a higher intensity motor setting.


SETUP and INSTALLATION

**Important: We strongly recommend
Two able-bodied adults setup and assemble this product.**

1. With the help of your able-bodied assistant, carefully lift the adjustable bed base frame out of the carton and place it top side down. **Note: Steps 1 through 8 with the bed top side faced down.**
2. Connect the **Control Box "A"** to the **Transformer "B"** the Control Box is the Black Box attached to the bottom of the bed. Extend the power cord from the **Control Box "A"** and plug it into the matching outlet on **Transformer "B"**. Extend the **Electrical Cord "C"** and plug it into the **Transformer "B."** (See Figure 1)

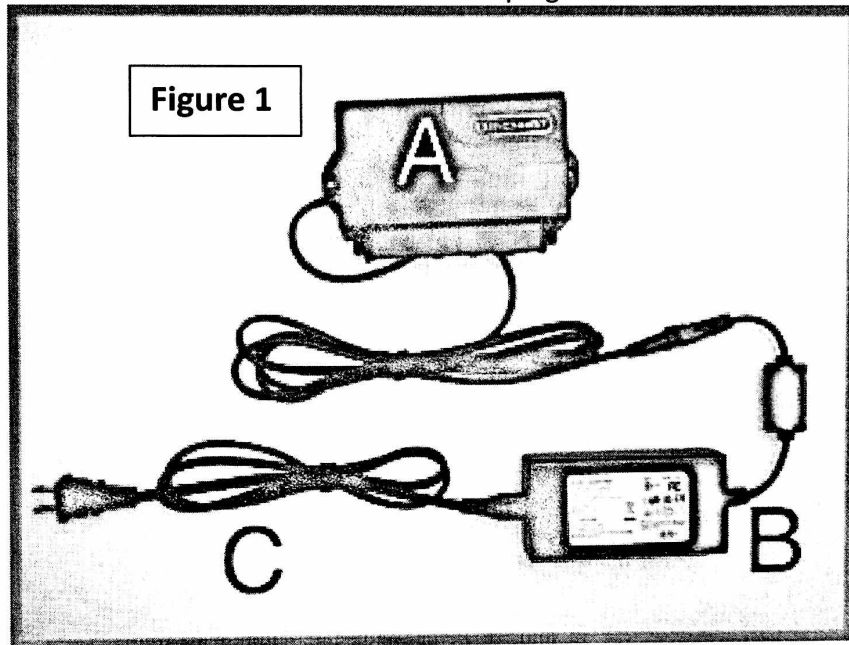

3. Install the four legs firmly into the base of the frame. The legs screw into the threaded holes in each corner of the adjustable base frame. (See Figure 2)

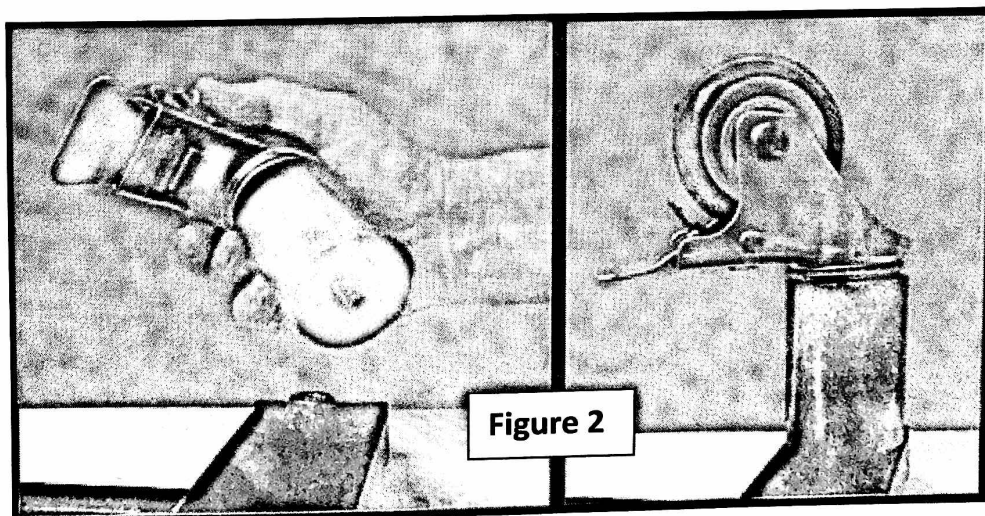

4. Locate the wireless remote control and insert 4 AAA batteries (See Figure 3)
5. Using the Wireless Remote, push the Head Up button for a momentary test of the Wireless Remote. If the motor is working quickly let go of the button and skip to step 8.
6. Synchronize the remote with the control box. First find the black box mounted under the bed. In Figure 4 the white arrows show the set button on the wireless remote and larger inset circle shows the small button on the side of the control box. (See Fig. 4) Hold in the "Set" button in on the remote, while holding in the "Set" button; press the small button on the side of the Control Box. You will hear three quick Beeping sounds. Press the Head Up button and quickly release; the adjustable bed should be working after matching the remote with the control box.

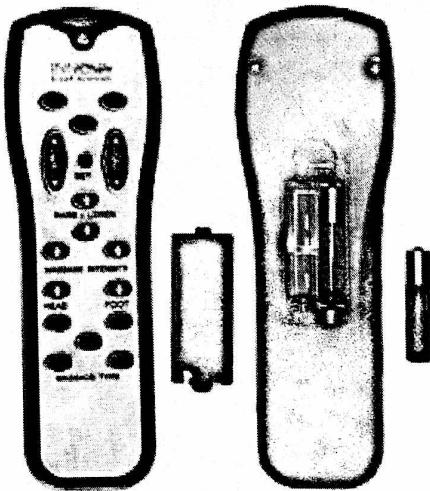


Figure 3

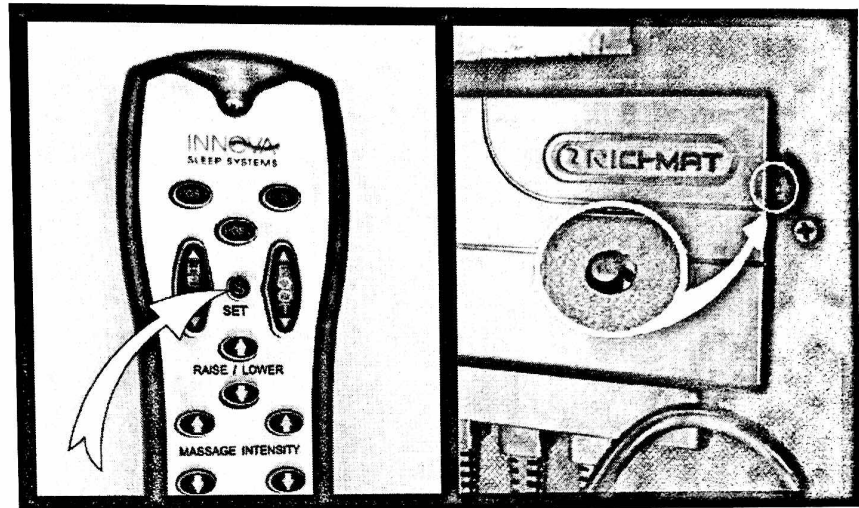



Figure 4

7. With the help of your able bodied assistant lift the adjustable bed frame up on it's side and set the bed upright in place. Note: check and make sure that all power cords clear and do not interfere with any Adjustable Bed Mechanisms. Plug electrical cord into a working electrical outlet.
8. Install the mattress retainer. Note: that the foot end of the bed has two molded plastic brackets. See Figures 5 & 6.

CAREFULLY REMOVE AND TURN THE MATTRESS RETAINING BAR UP. ALIGN & BOTH ENDS WHILE SLIDING IT INTO PLACE



Figure 5

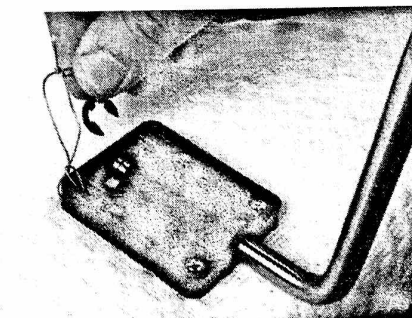

PUSH THE METAL CLIPS IN PLACE TO SECURE THE RETAINING BAR.

Figure 6


INNOVA

SLEEP SYSTEMS

Deluxe Wireless Remote Adjustable Beds

Preset Position Buttons 1,2 & 3

1. Adjust the head and foot to desired position.
2. Press and continue to hold in the "S" Button.
3. Continue holding in the "S" Button and press POS 1, POS 2 or POS 3
4. There will be a beeping sound and then release both buttons. You can reset the 3 position buttons by repeating the above steps.

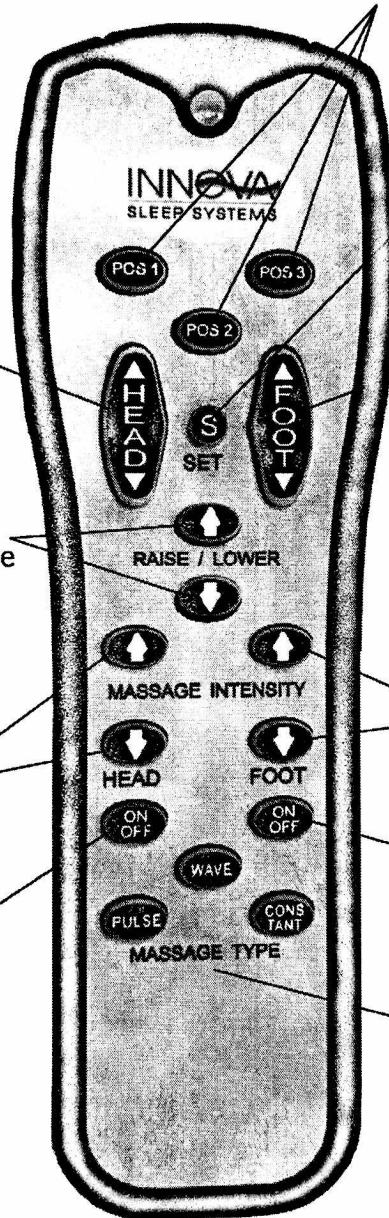

Head Button

Raise / Lower

Press one button to raise or lower both the Head and Foot at the same Time.

**Massage Intensity
Head**

Adjust Massage Intensity for the Head of the bed.

**Massage On/Off
Head**

Turns the Head Massage Unit On and Off.

Set or "S" Button

Used to Synchronize the remote to the Control Box. It is also used to reset the Position Buttons.

Foot Button

Used to raise and lower the foot of the bed.

**Massage Intensity
Foot**

Used to increase or decrease the massage intensity for the Foot of the bed.

**Massage On/Off
Foot**

Turns the Foot Massage Unit On and Off.

Massage Type

Offers three massaging actions: Pulse, Wave & Constant

**For Toll Free Customer Service
Call 877-386-1317**